



1. The keyboard can be used with personal computers equipped with USB-connectors.
2. It is better to connect the keyboard when the computer is turned off.
3. It is not recommended to use high temperatures for drying keycaps and other plastic parts.
4. If for any reason you spilled liquid on the keyboard, IMMEDIATELY shut it down and dry it for 48 hours.
5. Despite the fact that this does not affect the warranty, take care of your keyboard.

Plug the USB connector on your keyboard into any free USB port.  
Boot your computer and connect to the internet. Navigate to [darkproject.eu](http://darkproject.eu) and download the software. Start the software installation process and follow the on-screen instructions.

The crossed-out wheeled-bin symbol means that you must not dispose of this product together with unsorted household waste. As electrical devices, this product and its accessories may contain hazardous substances that are harmful or harm to your health if not disposed of correctly, please dispose of these products separately. As the end user, you are required by law to dispose of used electrical equipment at an official recycling point. For information on the location of an official recycling point, please contact your local authority, the site or the business where you purchased this product. By disposing of electrical products at an official recycling point, you are doing your bit to ensure equipment is recycled correctly and professionally, protecting the environment and your own safety. With the exception of the batteries, any batteries before disposing of the device. Under law, as a user you face risk of penalties if you dispose of devices and batteries illegally.



<b>Fn + ESC</b>	Turn off / on backlight	<b>Fn + F10</b>	Home
<b>Fn + F1</b>	Multimedia	<b>Fn + F11</b>	Calculator
<b>Fn + F2</b>	Volume -	<b>Fn + F12</b>	Search
<b>Fn + F3</b>	Volume +	<b>Fn + ↑/↓</b>	Light up / Light down
<b>Fn + F4</b>	Mute	<b>Fn + →/←</b>	Light speed up / Light speed down
<b>Fn + F5</b>	Stop	<b>FN + Win_L</b>	Lock / Unlock Win
<b>Fn + F6</b>	Previous	<b>Fn + END</b>	Switch main backlight colors
<b>Fn + F7</b>	Play / Pause	<b>FN + HOME</b>	Lighting effect switch
<b>Fn + F8</b>	Forward	<b>Fn + DEL</b>	Long press FN+DEL for 3 seconds to restore factory setting.
<b>Fn + F9</b>	E-mail		

Date of manufacture: indicated on the package  
Serial number: indicated on the package

Scan QR code to get access  
to user guides for other languages